


# OWNER'S GUIDE

## GRASS CATCHER

Model No.  
19007

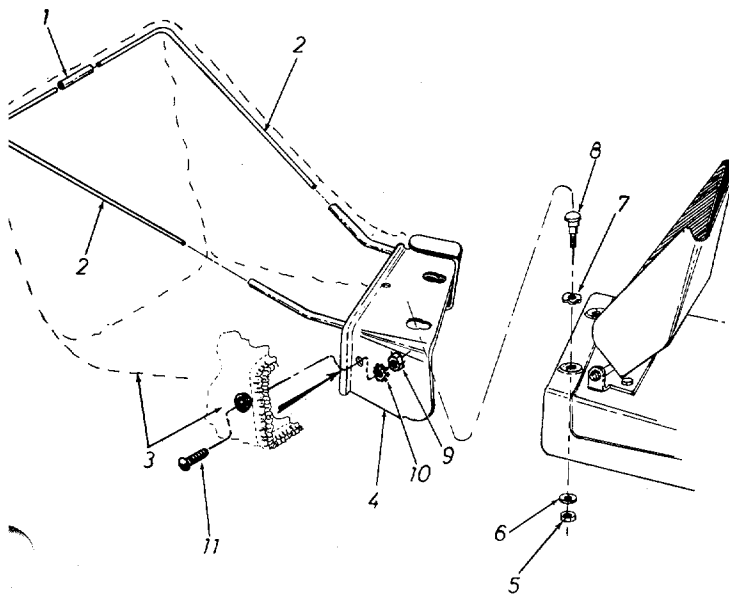

Under normal usage bag material is subject to wear, and should be checked periodically. Be sure any replacement bag complies with the mower manufacturer's recommendations.

### OPERATING RECOMMENDATION

Always stop the engine before removing the grass catcher. Do not restart the engine until the grass catcher has been put back on the mower in its proper place. Do not make any adjustment to the grass catcher assembly while the blade is revolving.

### PARTS LIST FOR MODEL 19007 GRASS CATCHER

f.	Part No.	Color Code	Description	New Part
1	749-0231		Tube - Frame Coupler	
2	3753-012		Bag Support	
3	764-0156		Bag	
4	15700		Grass Catcher Frame Ass'y.	
5	712-0287		Hex Nut 1/4-20 Thd.*	
6	736-0463		Fl.-Wash. .296 I.D. x .62 O.D. x .059	
7	736-0175		Wave Washer	
8	738-0330		Shoulder Screw	
9	710-0192		Truss Mach. Scr. #10-24 x 3/8 Lg.	
10	736-0147		External L-Washer #10	
11	712-0121		Hex Nut #10-24 Thd.	

## ASSEMBLY INSTRUCTIONS

1. Place the bag (3) so (flip top) is up.
2. Feed both bag supports (2) through the cloth channel in the top of the bag. See figure 1.

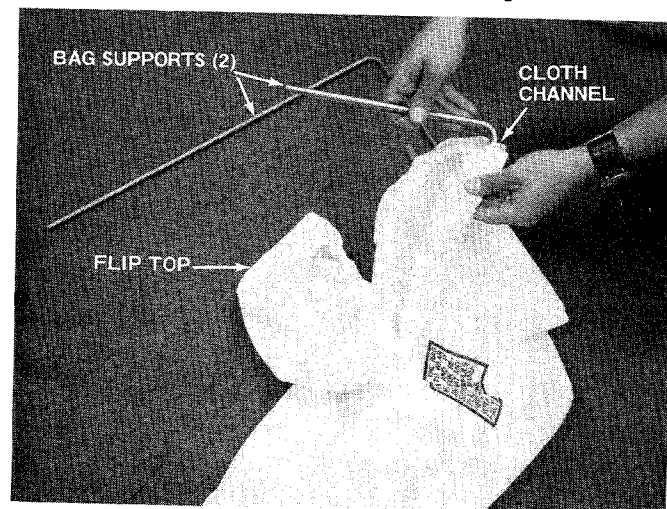



FIGURE 1

**YARD-MAN COMPANY** P.O. BOX 36940 • CLEVELAND, OHIO 44136

PRINTED IN U.S.A.


FORM No. 770-5352B

3. Attach the two bag supports (2) together with frame coupler tube (1). See figure 2.

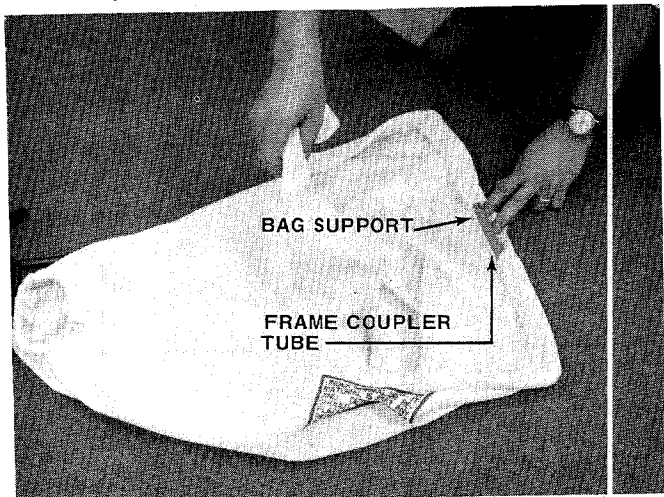


**FIGURE 2**

4. Insert the front frame assembly (4) into ends of bag supports (2). See figure 3.

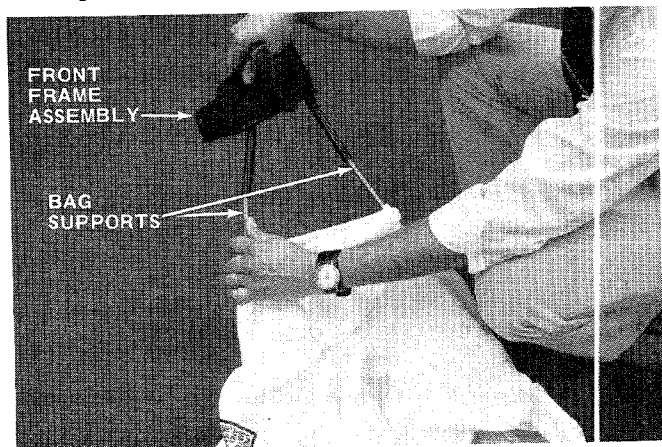

**FIGURE 3**

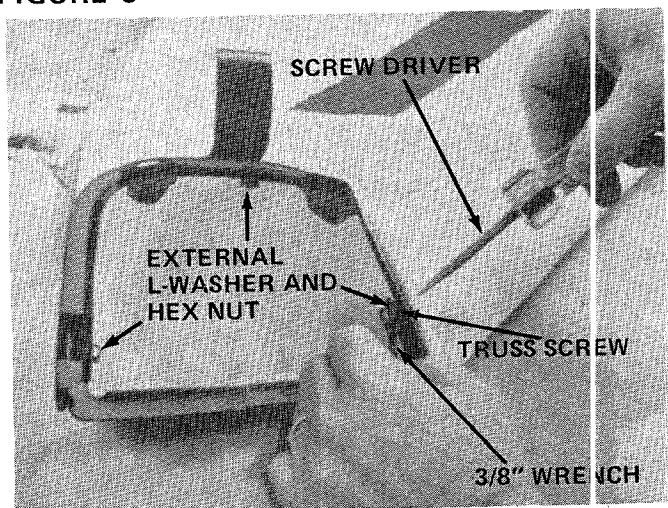

**FIGURE 4**

5. Slip the elastic mouth of the bag in the groove in the frame. Line up grommets in bag with holes in frame. Secure using three truss machine screws (9), Lock washers (10) and hex nuts (11). See figure 4.


## ATTACHING GRASS CATCHER TO MOWER



**WARNING**


**REMOVE SPARK PLUG WIRE FROM SPARK PLUG AND GROUND.**

1. Lift the chute deflector.
2. Place one wave washer over special shoulder bolt. See figure 5.
3. Place shoulder bolt and wave washer down through holes provided in deck. See figure 5.

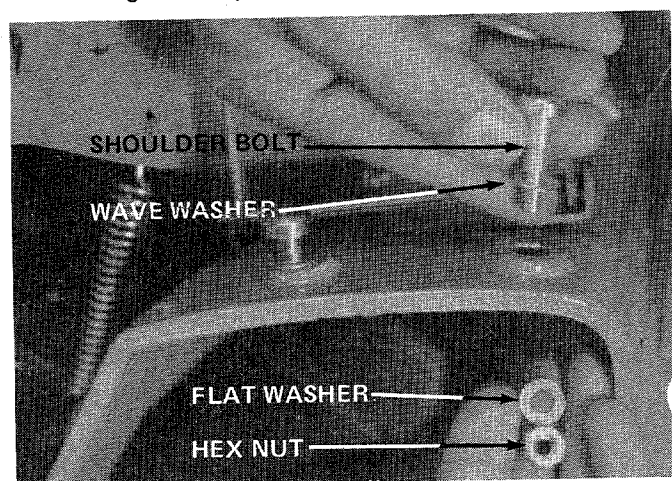

**FIGURE 5**

4. Fasten shoulder bolt to deck with flat washer and hex nut. See figure 6.
5. Slip grass catcher frame over head of shoulder bolts. See figure 6.

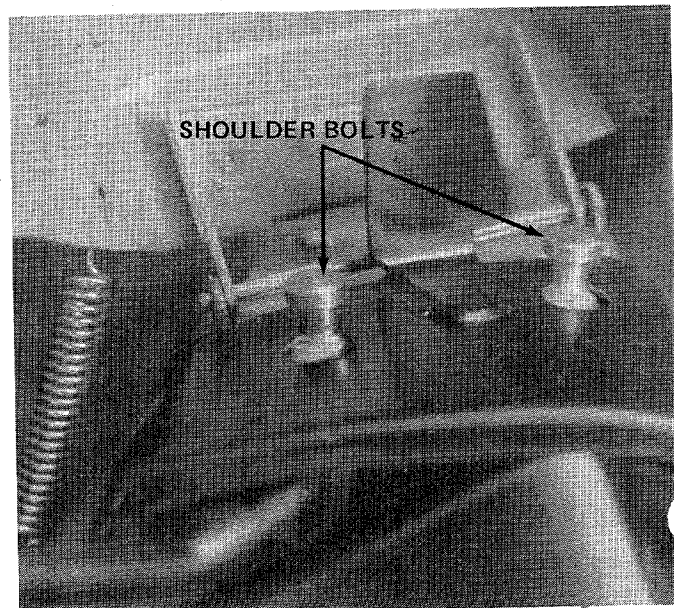

**FIGURE 6**